

CAUTION: To prevent shock, only plug in lamp after lamp assembly is complete.


WARNING: This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to work around this safety feature.

Before assembly, remove all parts and part packages from box. If anything is missing, please contact the retailer from which the product was purchased.

elk HOME

ANY QUESTIONS CALL: 800-613-3261
M-F 8:00AM-6:00PM ET

ITEM#: D4703

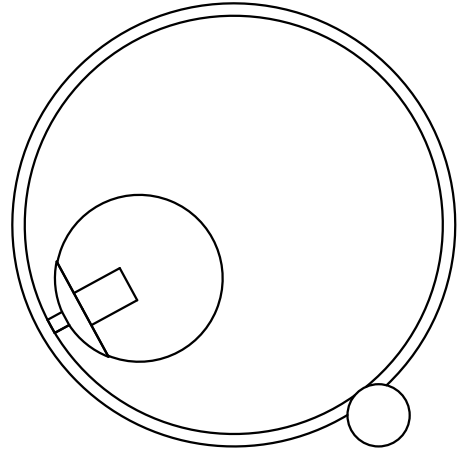

1. Screw recommended bulb (LED 7 watt max. type T10 bulb, not included) into socket. **WARNING:** Verify correct bulb wattage marked on socket of lamp. DO NOT exceed maximum bulb wattage.
2. Slip shade (K) over bulb and socket. Carefully rotate shade clockwise to secure shade in place. DO NOT over tighten.

