

# ASSEMBLY INSTRUCTION

## IMPORTANT

Read all instructions before assembling.

**WARNING:** To avoid damages, assemble the product on a soft, clean surface.

**CAUTION:** Keep small parts out of reach of children.

Before assembly, remove all parts and part packages from carton.

If anything is missing or damaged, please contact the retailer from which the product was purchased or contact customer service, 800-613-3261.

**elk HOME**

ANY QUESTIONS CALL : 800-613-3261  
M-F 8:00 AM - 6:00 PM ET







**H0805-11457**  
**Pier Dining Table**

**Note:** - \*Do not lift/drag the base holding from thinner or single leg part. hold base from upper wood plank / group of thicker leg.


\* Required 4 person for assembling.

\* Due to heavy weight and thinner leg component avoid dragging the product so please assemble the product at determined place

## PARTS AND HARDWARE LIST

SR.N	NAME	PICTURE	QTY.
A	TOP		1x
B	BASE		1x
C	ALLEN BOLTS (55X8mm)		8x
D	WASHER (25X8mm)		8x
E	ALLEN KEY		1x
F	SPINNER		1x

**STEP 1:-** Place the base on flat surface and match the serial code of top & base after matching the holes gently place the top on base.

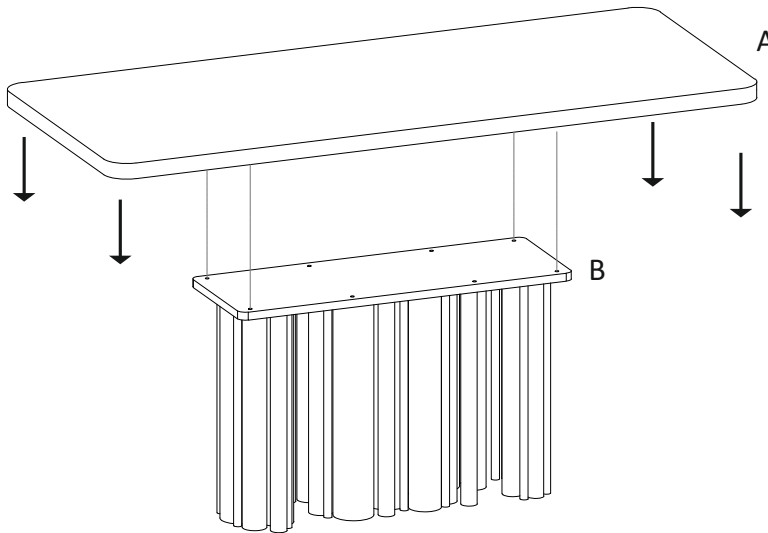

**STEP 2:-** Gently screw the top with base with given hardware.

