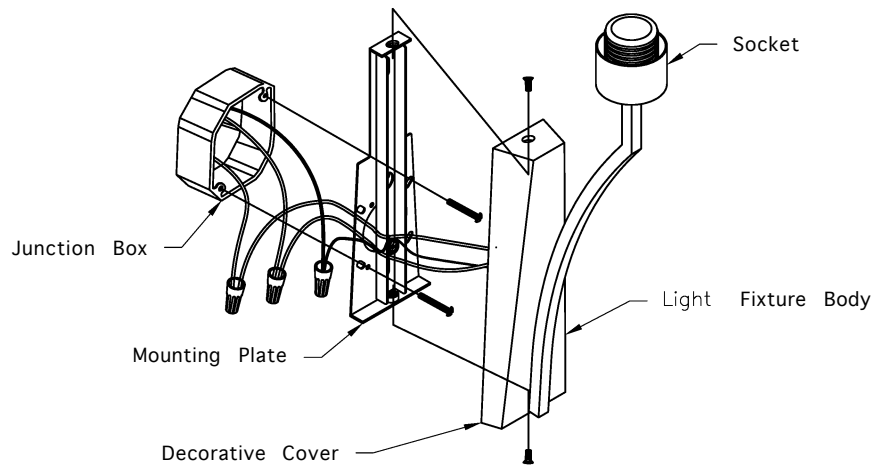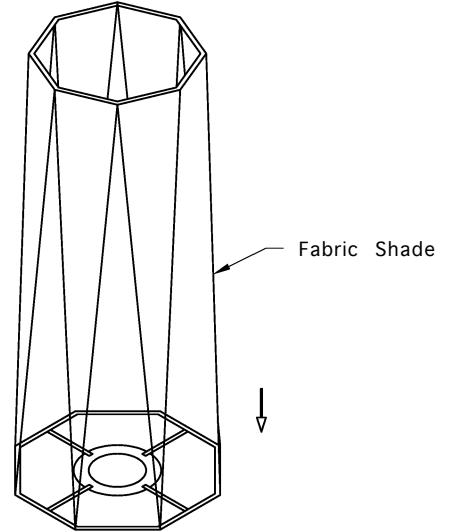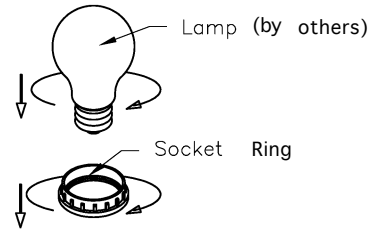1) Turn power off! Pull the wires out of the junction box and feed them through the center hole in the mounting plate.
Attach the mounting plate to the junction box with the screws provided so your fixture mounts vertically perpendicular to the ceiling.

2) Connect the light fixture wires to the wires in the junction box.
Wire black or brown to line voltage, white or blue to neutral, and attach the green or bare wire to the green ground screw provided on the mounting plate. Use wire nuts on the connections and leave no bare wire exposed (excepting the green). Tuck the wires inside the junction box.

3) Secure the light fixture to the mounting plate by lining up the holes on the decorative cover with the threaded holes on the mounting plate and screwing in the flat head screws provided. Make sure to fasten securely.

4) Slide fabric shade over the socket and secure with the threaded socket ring.

5) Screw the lamp (by others) into the socket inside your fixture. Turn your power back on and you have completed the installation process.

Lamp (by others)

Socket Ring

Fabric Shade

Socket

Junction Box

Light Fixture Body

Mounting Plate

Decorative Cover

Norwell
Lighting

REV.	BY	DATE	DESCRIPTION
.	.	.	.

INSTRUCTIONS GB BY _ _ SHEET _ 1 _ OF _ 1
Diamond Sconce Installation

DATE: 4/22/2019	DWG: 8291-A-INST

FILENAME:
8291-A-INST