


Be sure to read and understand all instruction sheets completely before beginning assembly or installation. All assembly and installation work must be performed by qualified personnel, in accordance with all applicable national and local building and electrical codes.

- Be aware that the weight of some fixtures may exceed the strength rating of the 4" electrical junction box or other such hardware at your site. In all cases, it is the responsibility of the contractor to properly secure the fixture to the structure, and to provide adequate support for the fixture.
- Due to constant production improvements, details of the design, material or finish may change in any way that will not significantly alter installed appearance or reduce function or performance.

© East Taunton, MA D2718 (5D8) 977-9991

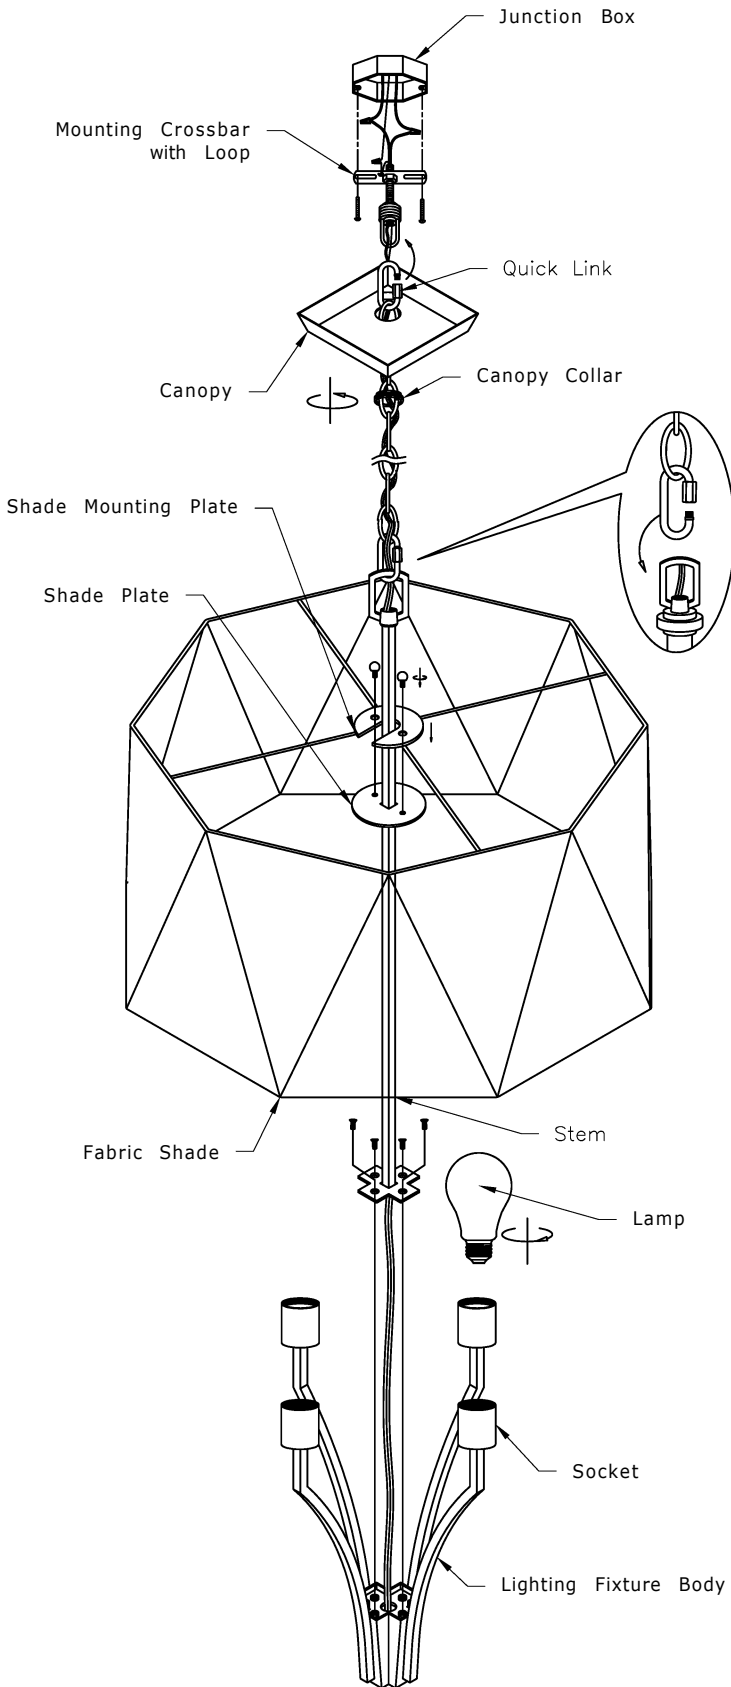

1) Turn the power off!
Attach the mounting crossbar with loop to the junction box with the screws provided. Pull the wires out of the junction box by the side of the crossbar.

2) Assemble the stem and body together and weave the wires through the chain links (every other one). Slide the canopy collar and canopy over the top of the quicklink and chain. Hook the quicklink over the loop and screw the connection on the quicklink shut. Insert the wires from the fixture through the hole in the center of the loop until they come into the junction box. Feed these wires out of the junction box on the same side that you fed the power wires through.

3) Connect the light fixture wires to the wires outside the junction box. Wire black or brown to line voltage, white or blue to neutral, and attach the green or bare wire to the green ground screw provided on the mounting crossbar. Use wire nuts on the connections and leave no bare wire exposed (excepting the green). Tuck the wires inside the junction box.

4) Slide the canopy and the canopy collar up the chain until the canopy makes contact with the ceiling. Thread the canopy collar onto the threaded portion of the loop and tighten the collar to hold the canopy against the ceiling.

5) Screw the light bulbs (by others) into the sockets.

6) Attach the fabric shade by sliding it into position to sit on the shade plate so the mounting holes line up with the holes on the shade mounting plate. Thread and tighten the two screws provided.

7) Turn the power back on and you have completed the installation process.

Norwell Lighting

REV.	BY	DATE	DESCRIPTION
INSTRUCTIONS			0 SHEET # GB BY SHEET 1 OF 1
Diamond Chandelier			
DATE:	4/23/2019		DWG: 8292-A-INST

FILENAME: 8292-A-INST