

- Be sure to read and understand all instruction sheets completely before beginning assembly or installation.
- All assembly and installation work must be performed by qualified personnel, in accordance with all applicable national and local building and electrical codes.
- Be aware that the weight of some fixtures may exceed the strength rating of the 4" electrical junction box or other such hardware at your site. In all cases, it is the responsibility of the contractor to properly secure the fixture to the structure, and to provide adequate support for the fixture.
- Due to constant production improvements, details of the design, material or finish may change in any way that will not significantly alter installed appearance or reduce function or performance.

© East Taunton, MA 02718 (508) 977-9991


1) Turn power off! Pull the wires out of the junction box and feed them through the center hole in the mounting plate. Attach the mounting plate to the junction box with the screws provided so your fixture mounts vertically perpendicular to the ceiling.

2) Connect the light fixture wires to the wires in the junction box. Wire black or brown to line voltage, white or blue to neutral, and attach the green or bare wire to the green ground screw provided on the mounting plate. Use wire nuts on the connections and leave no bare wire exposed (excepting the green). Tuck the wires inside the junction box.

3) Secure the light fixture to the mounting plate by lining up the holes on the decorative cover with the threaded holes on the mounting plate and screwing in the flat head screws provided. The fixture can be installed with the lamp above or below the decorative cover by spinning the fixture 180 degrees. Make sure to fasten securely.

4) Screw the lamp (by others) into the socket of your fixture. Lamps maximum diameter should not exceed 1 1/4" which is the size of the opening in the diffuser.

5) Thread the glass diffuser onto the socket. Beware the glass is fragile. Turn your power back on and you have completed the installation process.

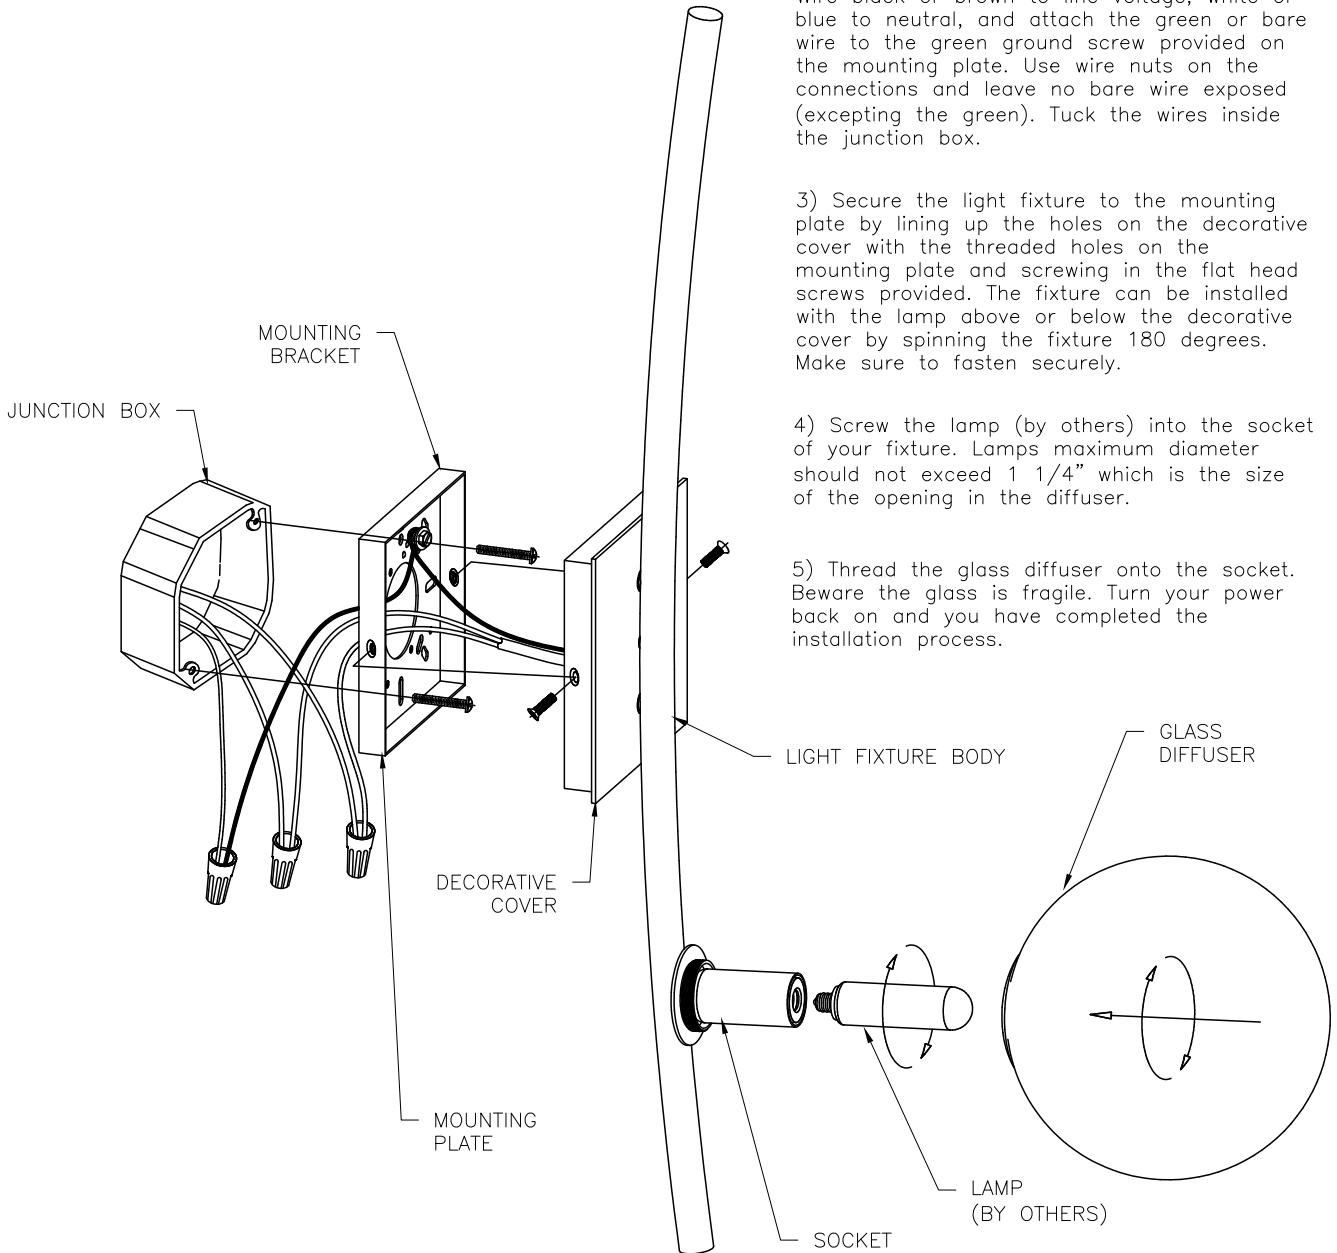

REV.	BY	DATE	DESCRIPTION
INSTRUCTIONS			DRAWN BY: GB SHEET #: SHEET OF 1
PERCH SCONCE			
DATE: 5/21/2019	DWG: 9681-A-INST		