



Be sure to read and understand all instruction sheets completely before beginning assembly or installation.

- All assembly and installation work must be performed by qualified personnel, in accordance with all applicable national and local building and electrical codes.
- Be aware that the weight of some fixtures may exceed the strength rating of the 4" electrical junction box or other such hardware at your site. In all cases, it is the responsibility of the contractor to properly secure the fixture to the structure, and to provide adequate support for the fixture.
- Due to constant production improvements, details of the design, material or finish may change in any way that will not significantly alter installed appearance or reduce function or performance.

© East Taunton, MA D2718 (5D8) 977-9991

AVA Installation with Canopy:

- A) Use the allen wrench (provided) to remove the (2) Flush Mounting Brackets from the back of the fixture. You will not need the Flush Mounting Brackets for installation using the Canopy.
- B) Optionally, you may choose to position the Ava Body off-center of the Canopy:
- B1) On the back side of the Canopy, locate the (2) screws that lock the Ava Body in place. Loosen (but do not remove) these screws. (Note that these are opposite the screws that hold the LED Driver Bracket.)
- B2) You may slide the Canopy along the length of the Lena Body, AWAY FROM the direction of the LED Driver Bracket. Do not slide in the other direction, as this will cause interference with the LED Wires.
- B3) As you slide the Canopy along the Ava Body, very carefully guide the LED Wires through the center hole. Keep the LED wires straight within the channel on the back of the Ava Body.
- B4) Tighten the (2) Screws to hold the Canopy in place.
- C) Secure the Mounting Bracket to the Electrical Junction Box.
- D) Make all necessary electrical connections between the Lena Canopy and the Electrical Junction Box: Green (or bare copper) to Green (or bare copper); White to White; Black to Black.
- E) Place the Lena Canopy over the Mounting Bracket and use the (2) Flat Head Screws to secure it in place.
- F) Restore power and test fixture operation to complete installation.

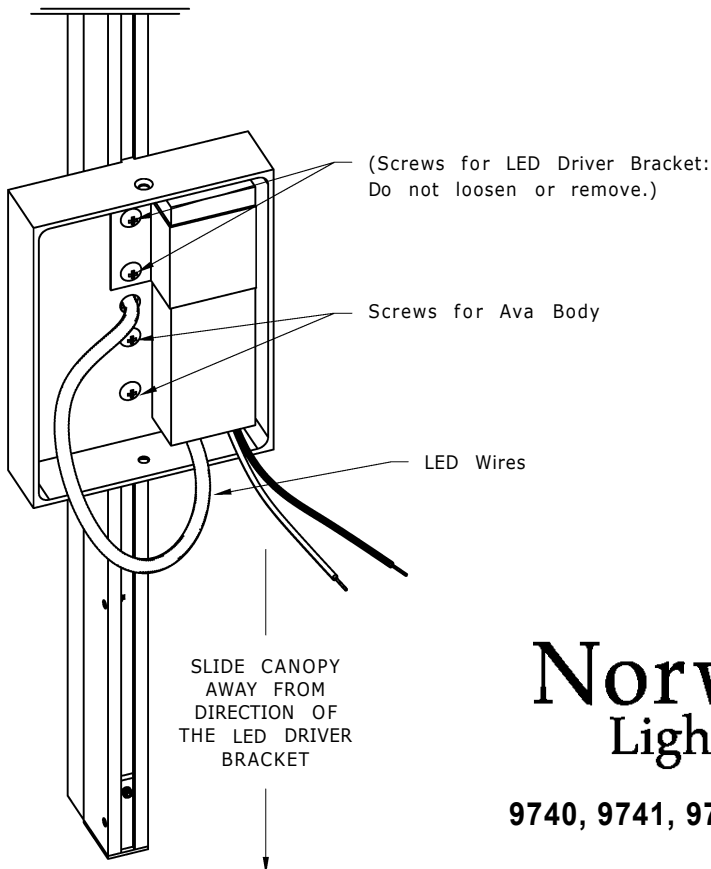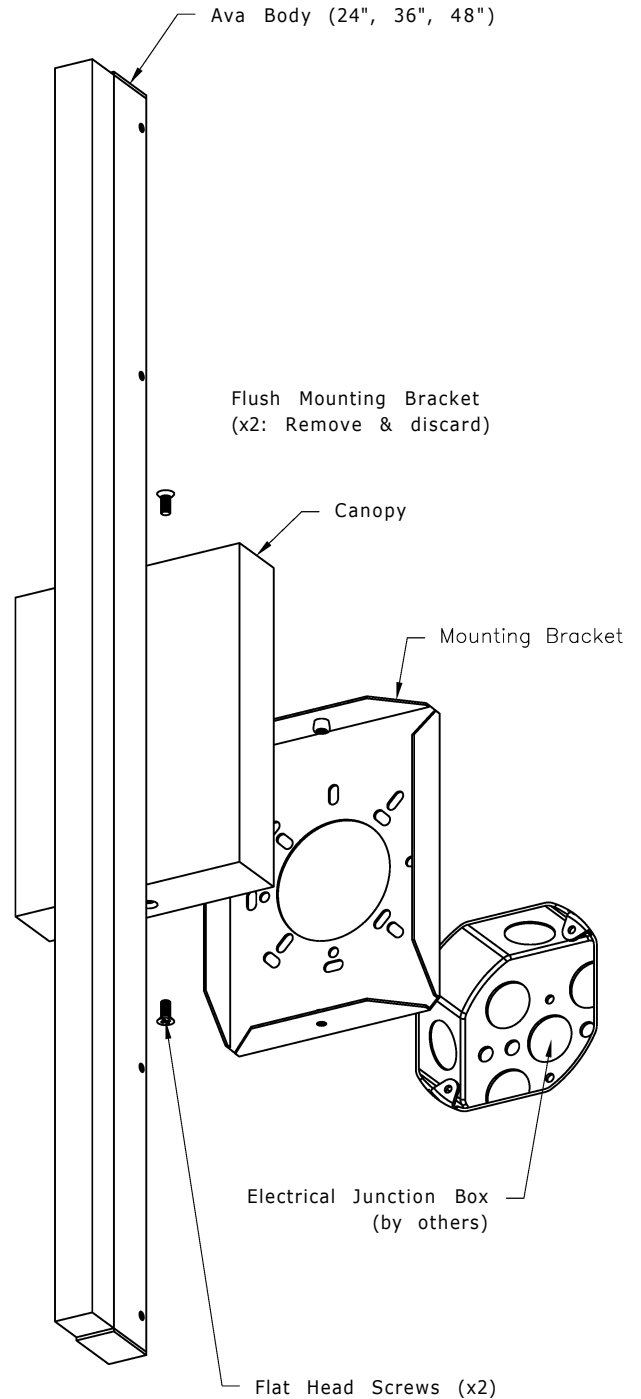

Norwell
Lighting
9740, 9741, 9742 and 9743

REV.	BY	DATE	DESCRIPTION
INSTRUCTION SHEET			#
Ava Sconce Installation: With Wall Canopy			1 OF 2
DATE	DRAWN		FILENAME
Apr 16, 2018	20180319-INST1		AVA INSTALLATION SHEETS 20180319

