

WARNING:

This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.




ANY QUESTIONS CALL: 800-613-3261
M-F 8:00AM-6:00PM ET

CAUTION: To prevent shock, only plug in lamp after lamp assembly is complete.

WARNING: This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to work around this safety feature.

Before assembly, remove all parts and part packages from box. If anything is missing, please contact the retailer from which the product was purchased.

ITEM#: H0019-11088

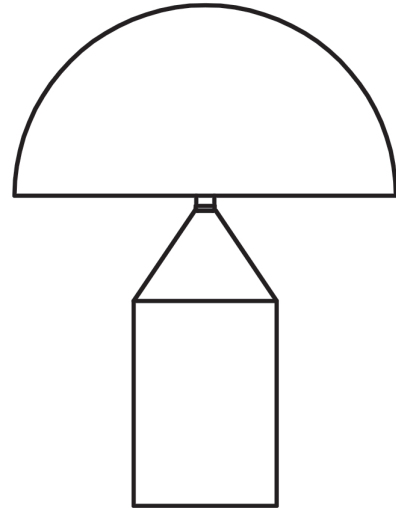

1. Pull lamp cord from lamp base (B). Make sure lamp cord is pulled taut.
2. Screw socket assembly (A) onto top of lamp base (B). **CAUTION:** DO NOT pinch lamp cord between socket assembly (A) and lamp base (B).
3. Screw bottom of threaded pipe (C) onto top of socket cluster (A).
4. Screw recommended bulbs (not included) into sockets. **WARNING:** Verify correct bulb wattage marked on socket of lamp. DO NOT exceed maximum bulb wattage.
5. Lower shade (D) down over threaded pipe (C). Screw shade (D) onto top of threaded pipe (C). DO NOT over tighten.

