WARNING:

This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.

CAUTION: To prevent shock, only plug in lamp after lamp assembly is complete.


WARNING: This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to work around this safety feature.


Before assembly, remove all parts and part packages from box. If anything is missing, please contact the retailer from which the product was purchased.

- 1. Slip hole in washer (B) over threaded pipe on top of socket cluster (A).
- 2. Lower shade (C) down over threaded pipe. Pass hole in center of shade (C) over threaded pipe.
- 3. Slip hole in washer (B) over threaded pipe protruding from top of shade (C).
- 4. Thread finial (D) onto threaded pipe. Tighten finial (D) to secure shade (C) in place. DO NOT over tighten.
- Screw recommended bulbs (not included) into sockets. WARNING: Verify correct bulb wattage marked on socket of lamp. DO NOT exceed maximum bulb wattage.



ITEM#: H0019-11089

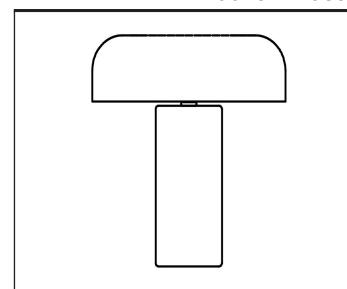

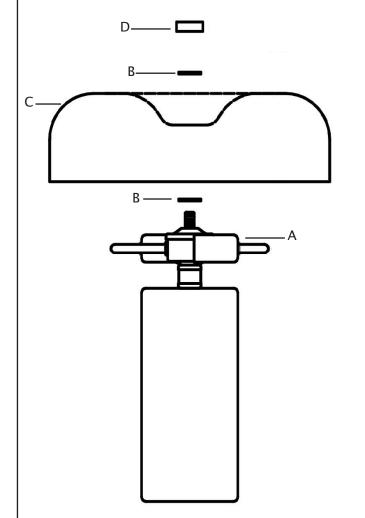

1