

OLD RIVER ROAD

SWING ASSEMBLY INSTRUCTION

Step-1

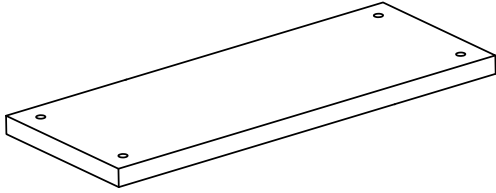


fig-01

Step-2

Insert the iron handle in wood swing hole as per fig-02.

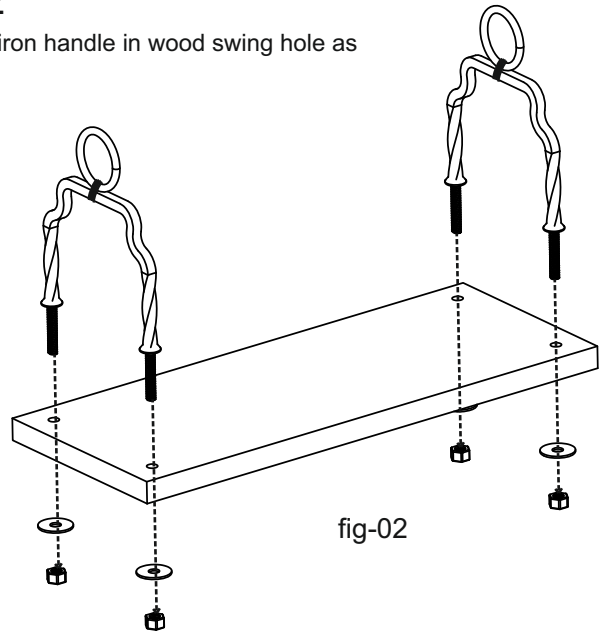


fig-02

Step-3

Insert the washers in threaded bolt & tighten the nut with wrench as per fig-03.

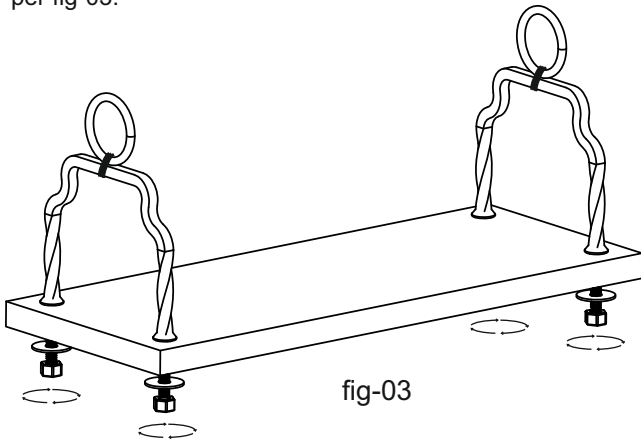


fig-03

Step-4

Assembly is complete.

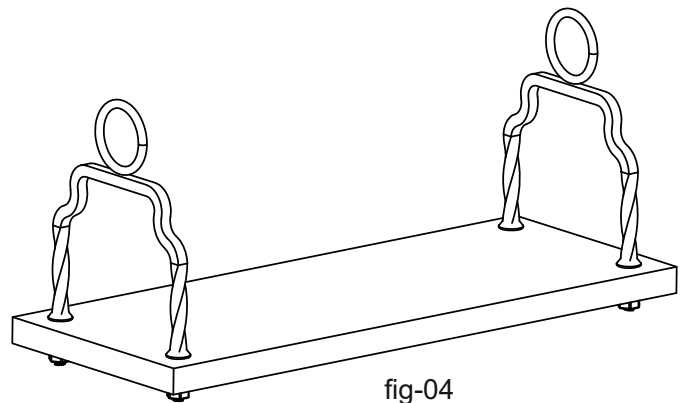


fig-04

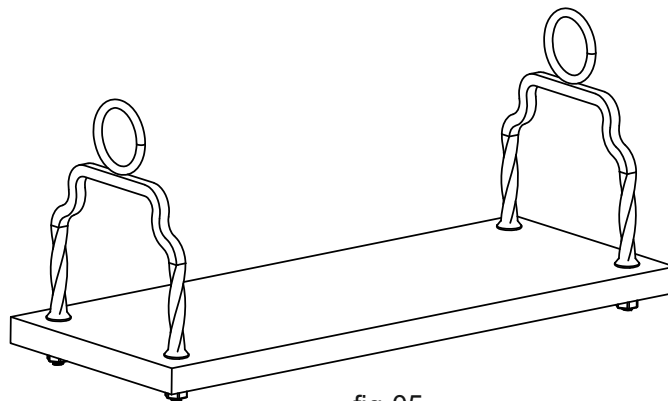


fig-05

Care Instructions:

Assembly Complete.

Please Ensure before use swing handle Nut & bolt Tighten properly.

Recommended maximum loading weight would be 80 to 100 Kgs.