

# OLD RIVER ROAD

## SWING ASSEMBLY INSTRUCTION

### Step-1

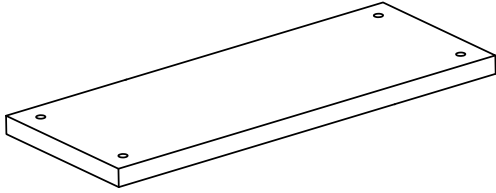


fig-01

### Step-2

Insert the iron handle in wood swing hole as per fig-02.

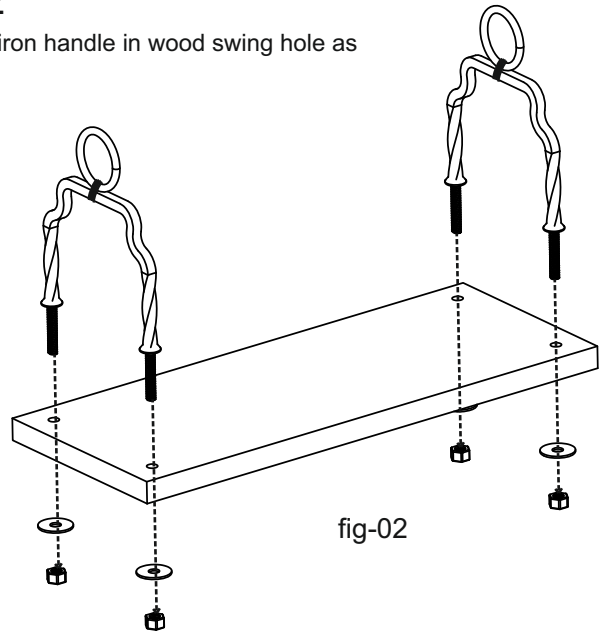


fig-02

### Step-3

Insert the washers in threaded bolt & tighten the nut with wrench as per fig-03.

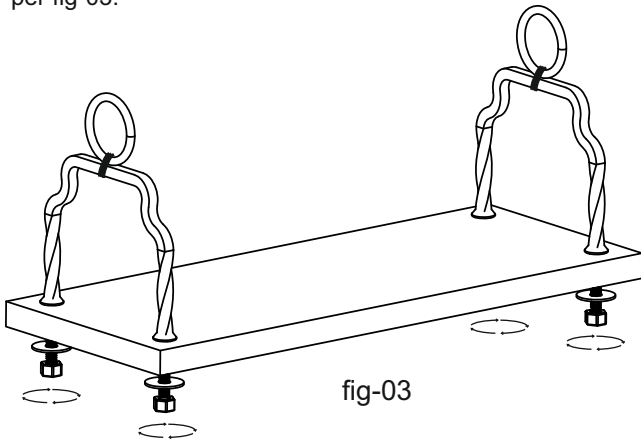


fig-03

### Step-4

Assembly is complete.

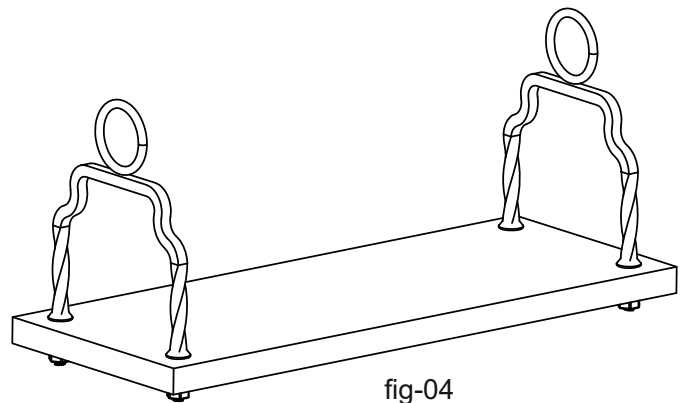


fig-04

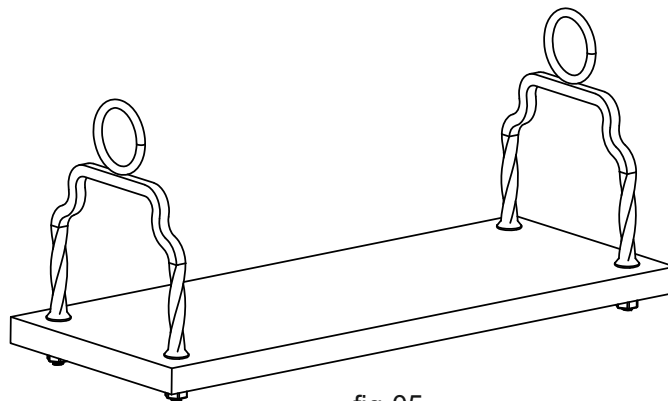


fig-05

### Care Instructions:

Assembly Complete.

Please Ensure before use swing handle Nut & bolt Tighten properly.

Recommended maximum loading weight would be 80 to 100 Kgs.